

WARNING FLOOR EDGER

Any piece of equipment can be dangerous if not operated properly. **YOU** are responsible for the safe operation of this equipment. The operator must carefully read and follow any warnings, safety signs and instructions provided with or located on the equipment. Do not remove, defeat, deface or render inoperable any of the safety devices or warnings on this equipment. If any safety devices or warnings have been removed, defeated, defaced or rendered inoperable, **DO NOT USE THIS EQUIPMENT!!!**

This 120-volt equipment requires a grounded outlet, do not modify plug.

 **WARNING:** This product can expose you to wood dust which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov

Always use a hammer and punch to countersink nails before sanding.

IMPORTANT SAFETY RULES TO FOLLOW

1. Do not use power tools in damp or wet locations. Do not expose sander to rain. Failure to follow these instructions increases risk of electrocution.
2. Avoid gaseous area. Do not operate machine in explosive atmospheres in presence of flammable liquids or gases. This motor creates sparks, which could ignite fumes. Hitting a nail while sanding can cause sparks and create a fire or explosion.
3. Do not wear loose clothing or jewelry. Wear safety glasses, ear protection, and dust mask.
4. Always inspect machine for switch operation, frayed or damaged cords. Do not use if machine is not in proper working order.
5. Avoid accidental starting. Be sure the switch is in the "OFF" position before plugging into outlet. Do not operate without all guards in place.
6. Do not use machine as a step or furniture. Do not ride on this machine.
7. Serious damage can result if machine is left running in one spot. Always sand at a constant rate. Do not use sanders on cement. This machine is for use on wood floors only.
8. Never over fill dust bag or leave machine unattended with dust in bag.
 - a. Dust is extremely hot and can cause a fire. Do not empty into a combustible container.
 - b. Do not leave dust in bag upon return of the equipment to the rental yard.
 - c. For better dust pickup always empty the bag when it reaches the half full mark.
9. Practice first in a closet or in a less visible area of the floor.

If the person receiving this handout will not be the user of the equipment, forward these instructions to the operator. **IF** there is any doubt as to the operation or safety of the equipment,

DO NOT USE!!! CALL A TOOL SHED IMMEDIATELY!!!

FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN INJURY OR DEATH