WARNING 16' MATERIAL LIFT

Any piece of equipment can be dangerous if not operated properly. <u>YOU</u> are responsible for the safe operation of this equipment. The operator must carefully read and follow any warnings, safety signs and instructions provided with or located on the equipment. Do not remove, defeat, deface or render inoperable any of the safety devices or warnings on this equipment. If any safety devices or warnings have been removed, defeated, defaced or rendered inoperable, **DO NOT USE THIS EQUIPMENT!!!**

WARNING: This product can expose you to chemicals including Chromium from steel products, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov

DANGER: THIS EQUIPMENT HAS MULTIPLE PINCH POINTS THAT CAN CAUSE DISMEMBERMENT OR DEATH! KEEP HANDS, FEET AND ALL OTHER BODY PARTS CLEAR AT ALL TIMES.

IMPORTANT SAFETY RULES TO FOLLOW

- 1. Maximum load is 650lbs at a 14" load center.
- 2. Do not use to lift persons. Lift is only to be used to lift material.
- 3. Load rating is based on load center not exceeding 14" from back of forks.
- 4. Use on level surface only.
- 5. Center load against back of forks.
- 6. Deploy outriggers, set and level base.
- 7. Inspect cable before using. Do not use if cable is damaged, frayed or worn.
- 8. Do not stand under, or allow anyone else to stand under load.
- 9. Do not use ladder on or against unit.
- 10. Stay clear of overhead wires and obstructions.
- 11. Do not move with elevated load.
- 12. Keep a minimum of three wraps of cable around winch drum.
- 13. When done using be sure to lock lower stage using the lock arm on side of unit.

If the person receiving this handout will not be the user of the equipment, forward these instructions to the operator. If there is any doubt as to the operation or safety of the equipment,

DO NOT USE!!! CALL A TOOL SHED IMMEDIATELY!!! FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN INJURY OR DEATH

Warning this lift conducts electricity. Do Not use this Lift where it may come into contact with power lines or other electric circuts. Failure to comply to this warning will result in serious personal injury or death. For proper set up distances from High Voltage Power Lines see chart below.

Maintain safe distances away from electrical power lines and apparatus in accordance with applicable governmental regulations and the following chart

Voltage	Minimum Safe
	Approachable Distance

Phase to Phase	Feet	Meters
0 to 300V	Avoid Contact	
300V to 50KV	10	3.1
50KV to 200KV	15	4.6
200KV to 350KV	20	6.1
350KV to 500KV	25	7.6
500KV to 750KV	35	10.7
750KV to 1000KV	45	13.7

Allow for mast movement and electrical line sway or sag, and be aware of strong or gusty winds. Do not use the machine as a ground for welding.